

Fig. 1

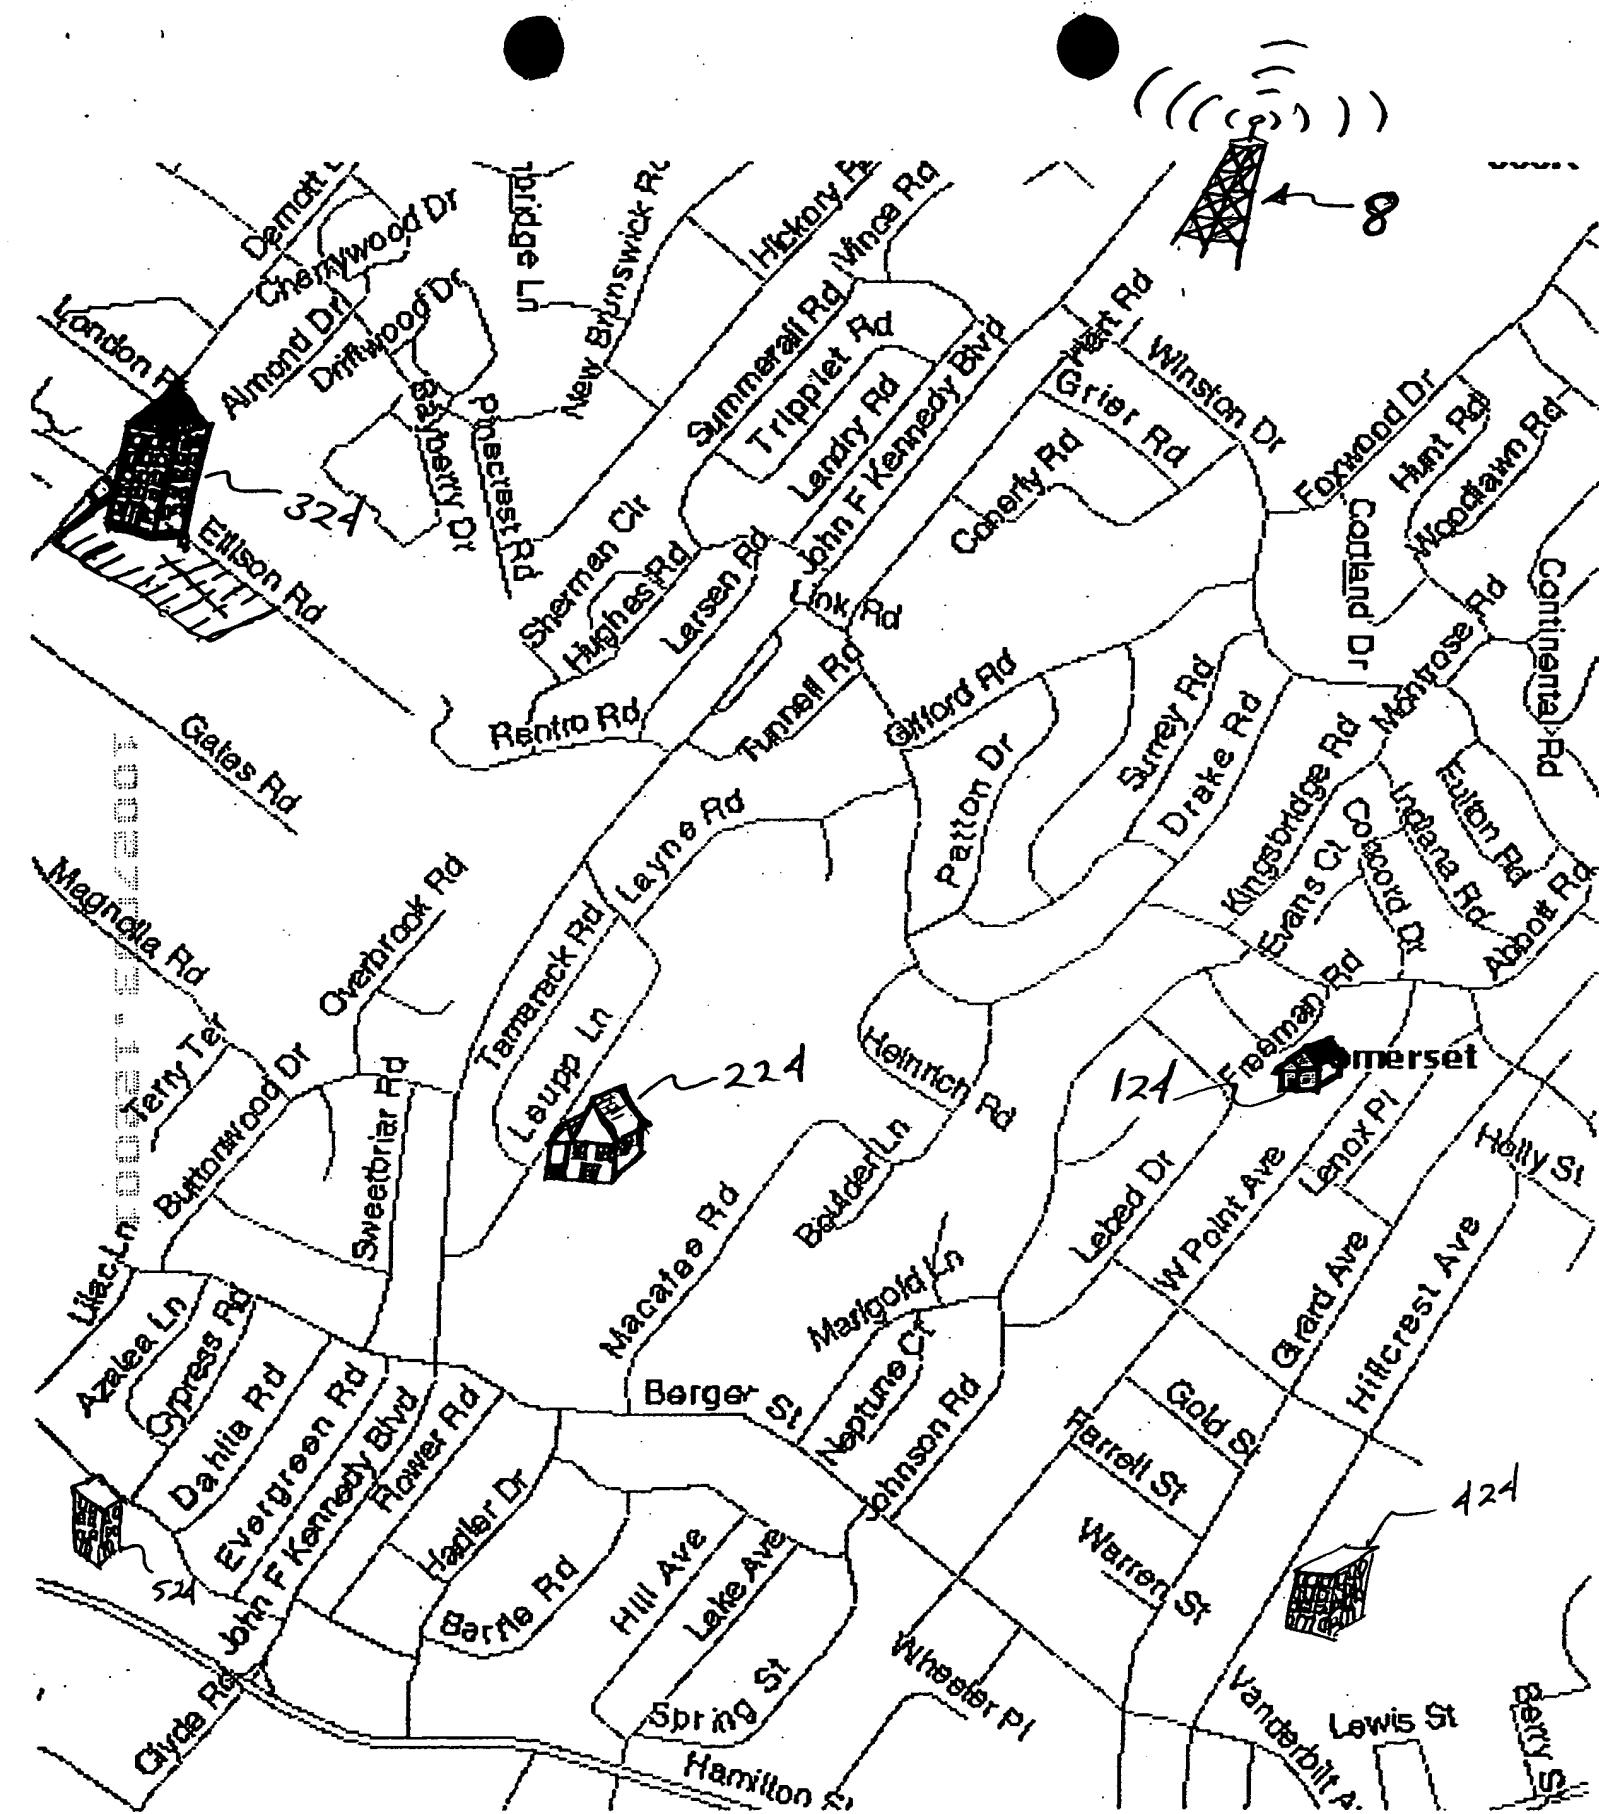


Fig. 2

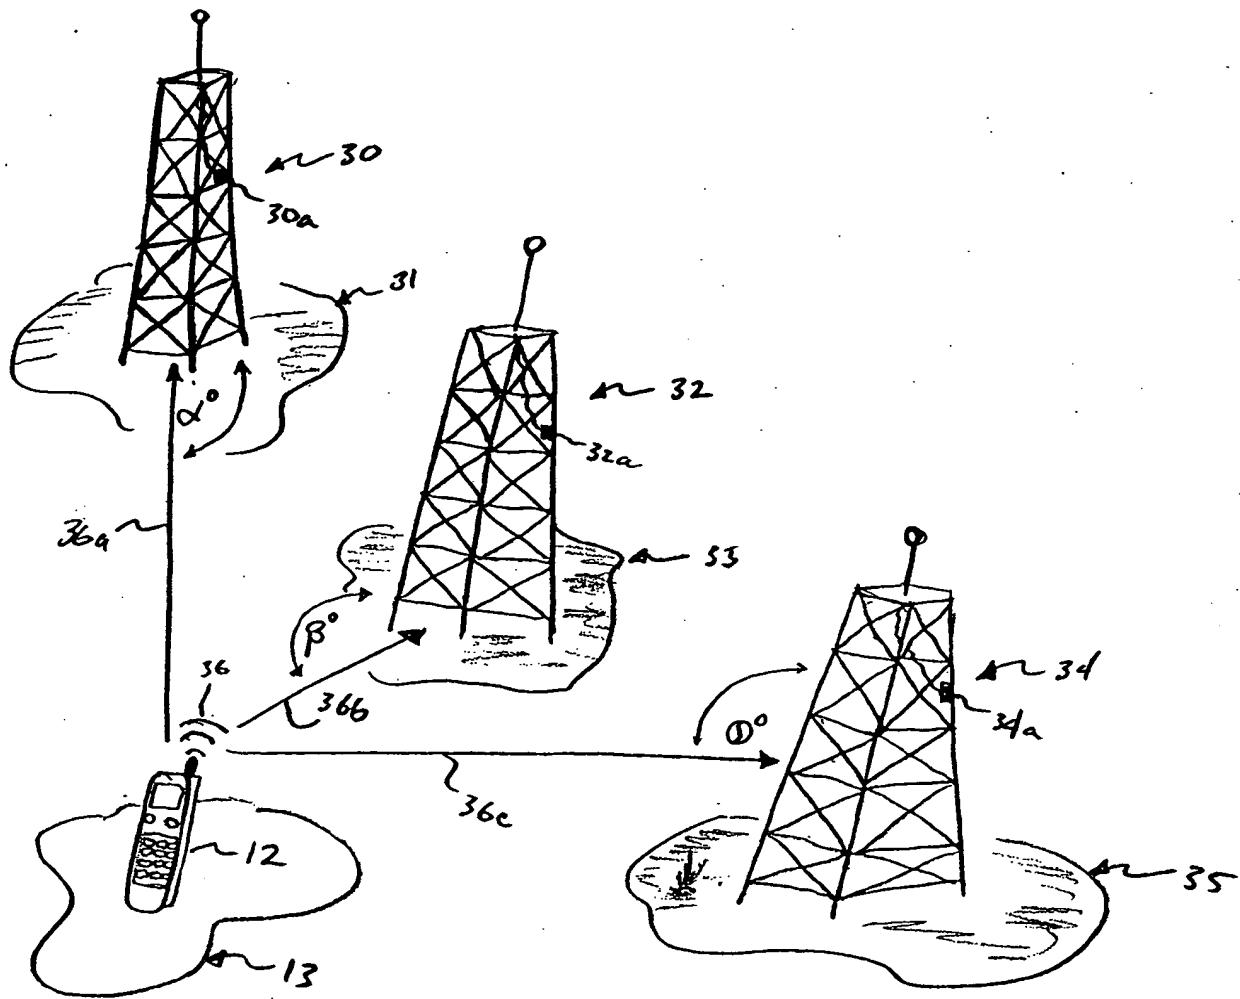


Fig. 3

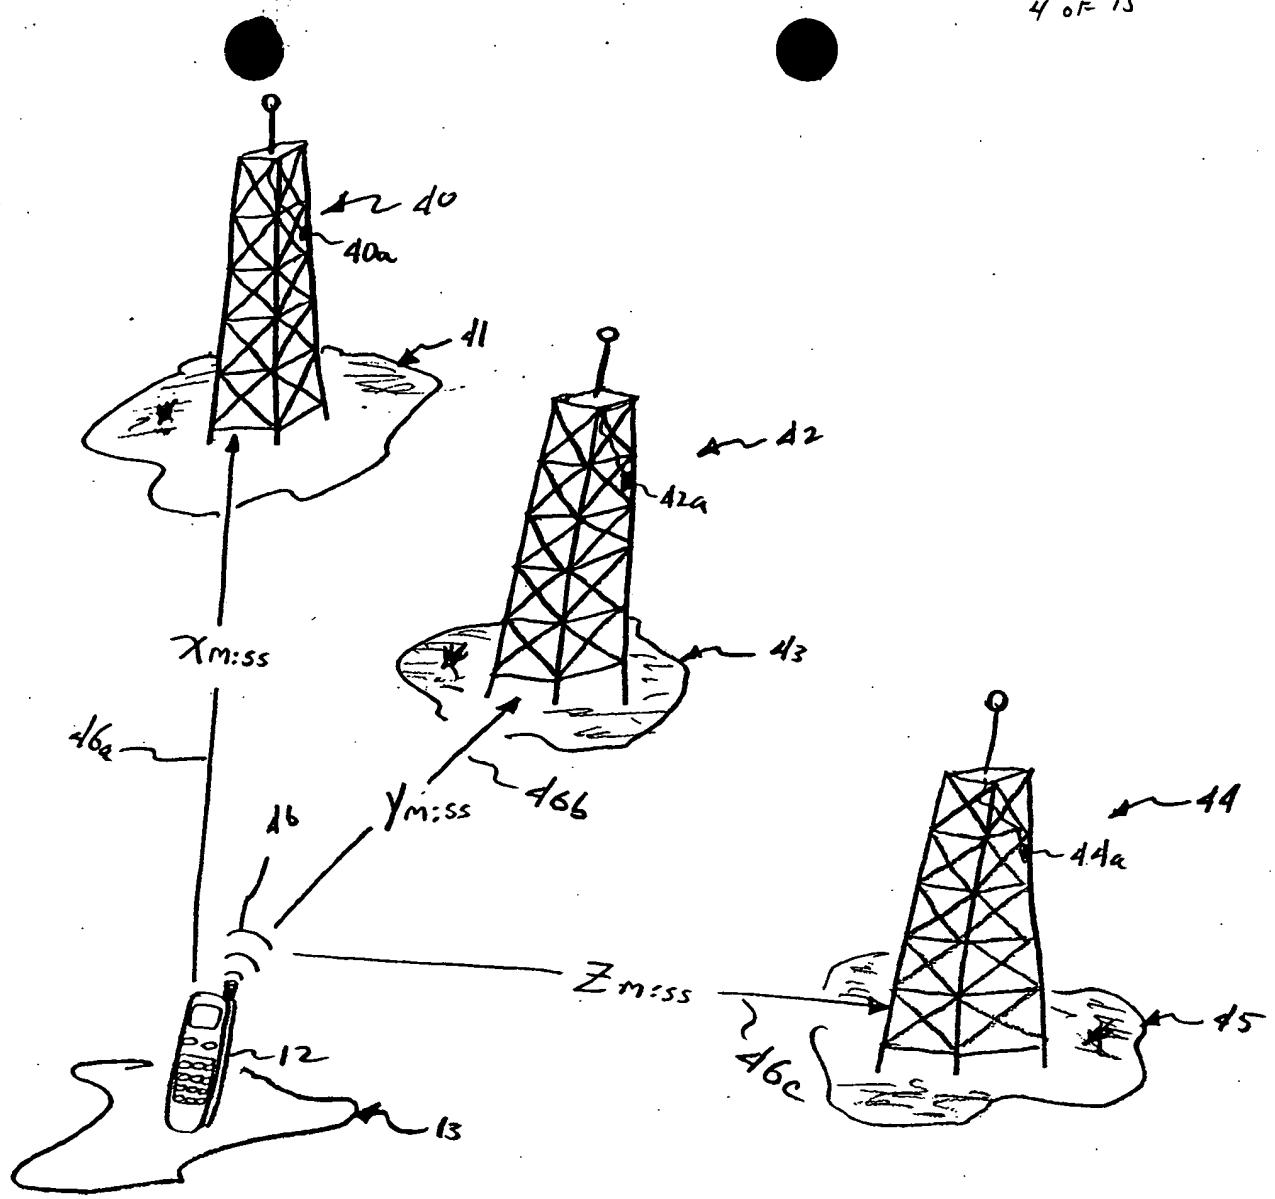


Fig. 4

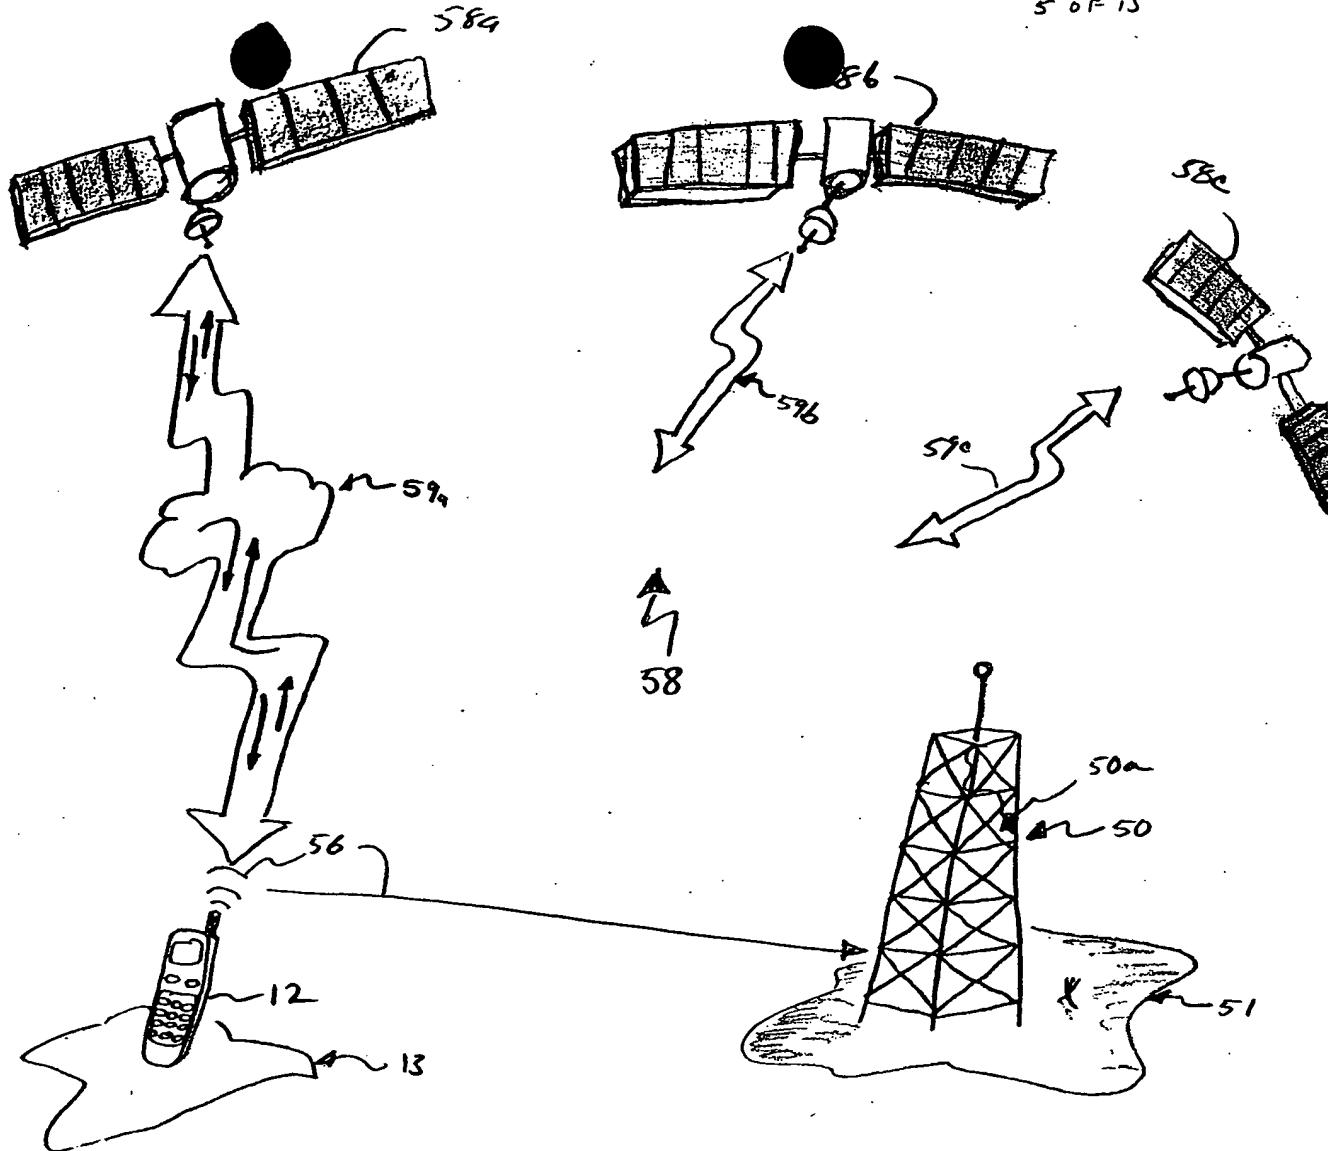


Fig. 5

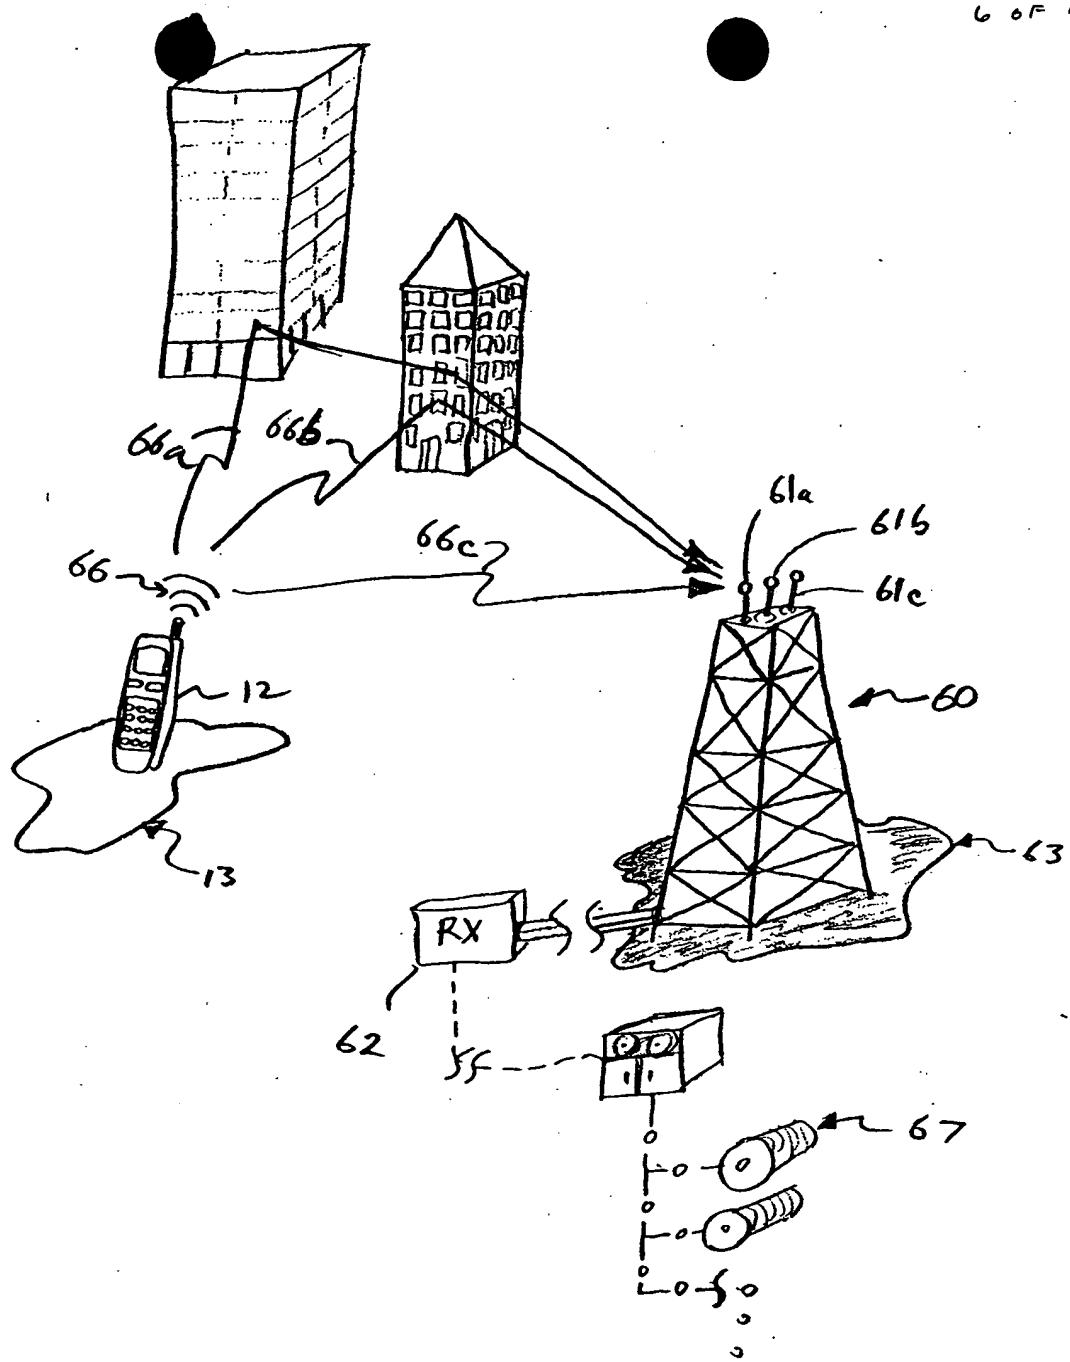


Fig. 6

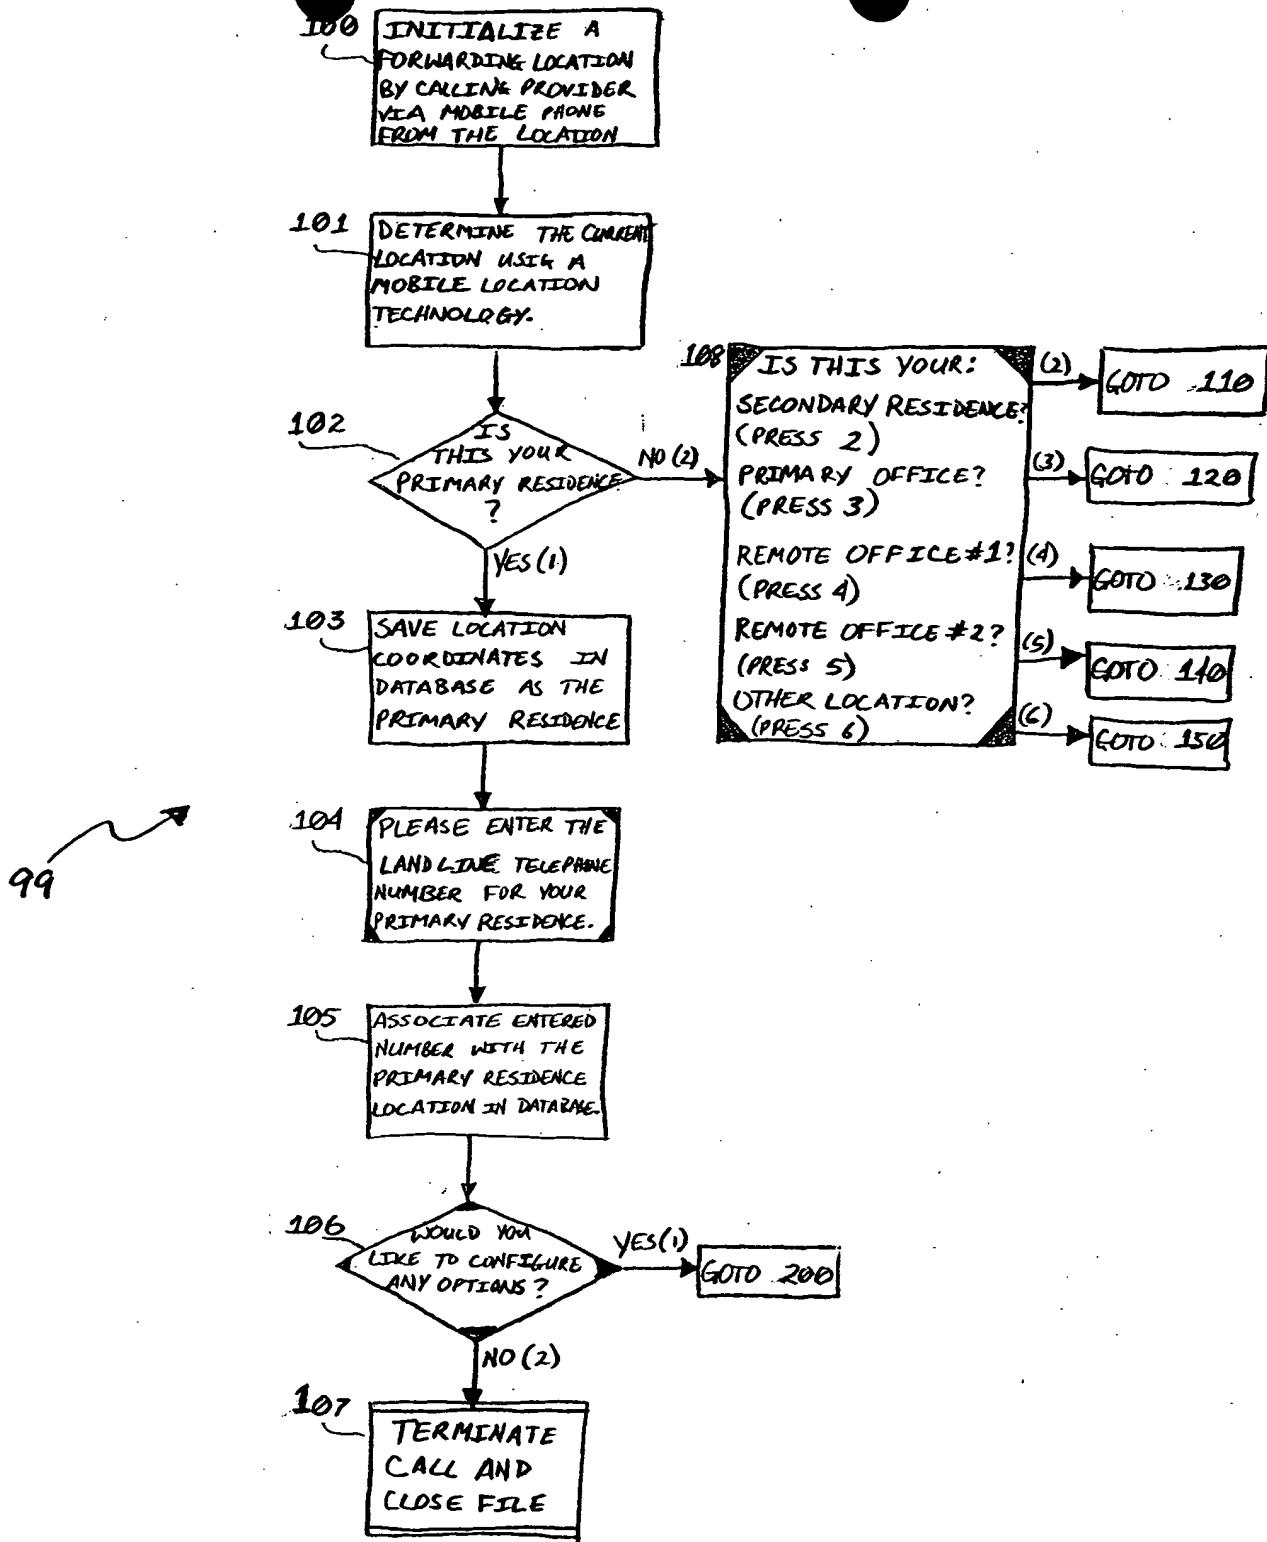


Fig. 7

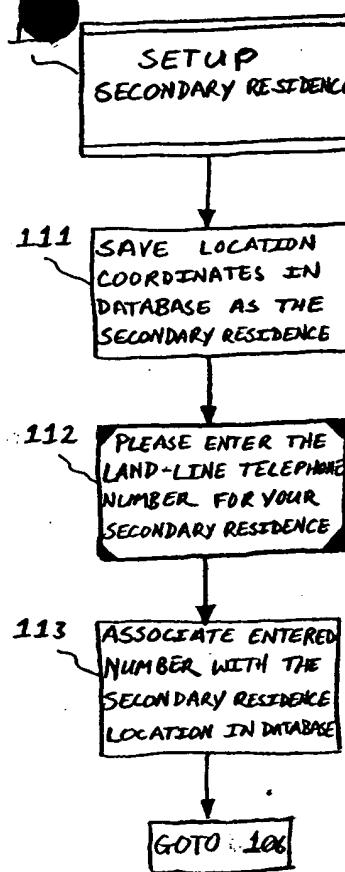


Fig. 8

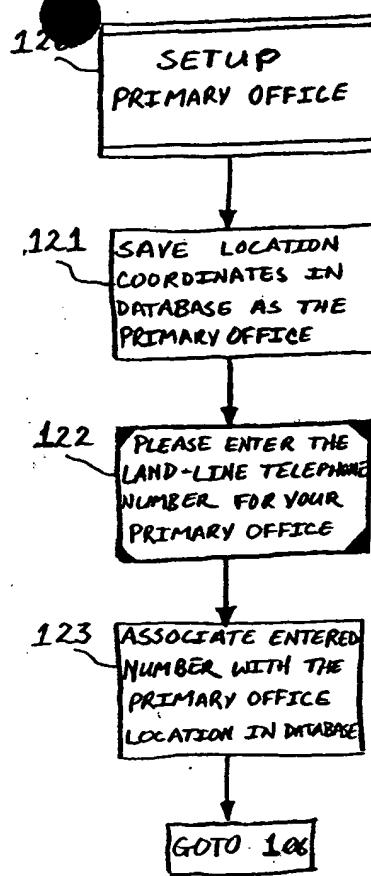


Fig. 9

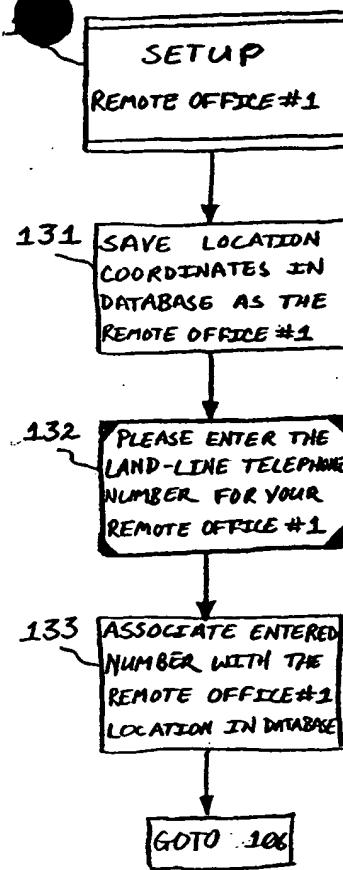


Fig. 10

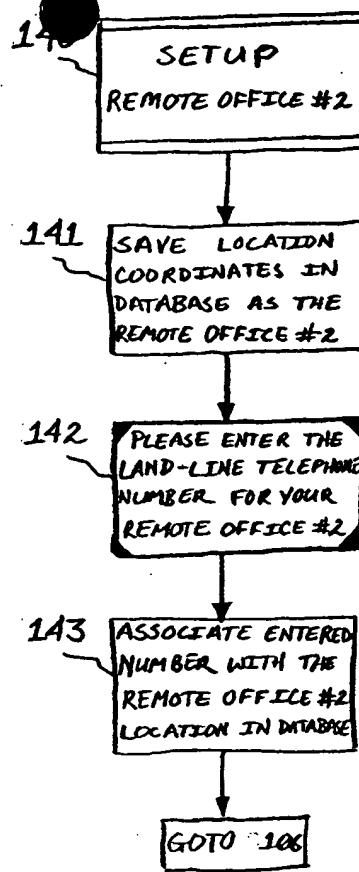


Fig. 11

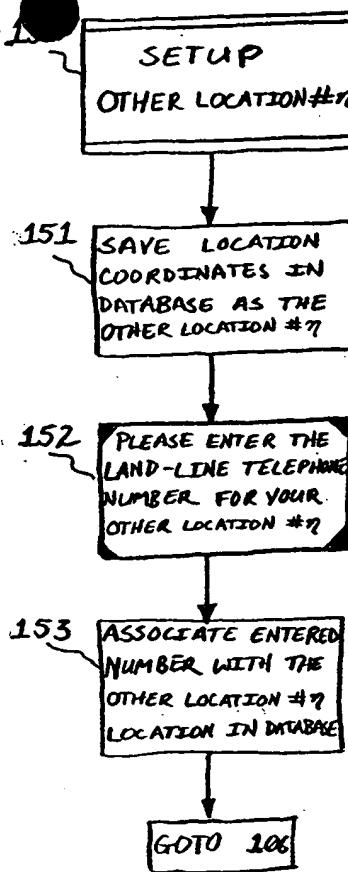


Fig. 12

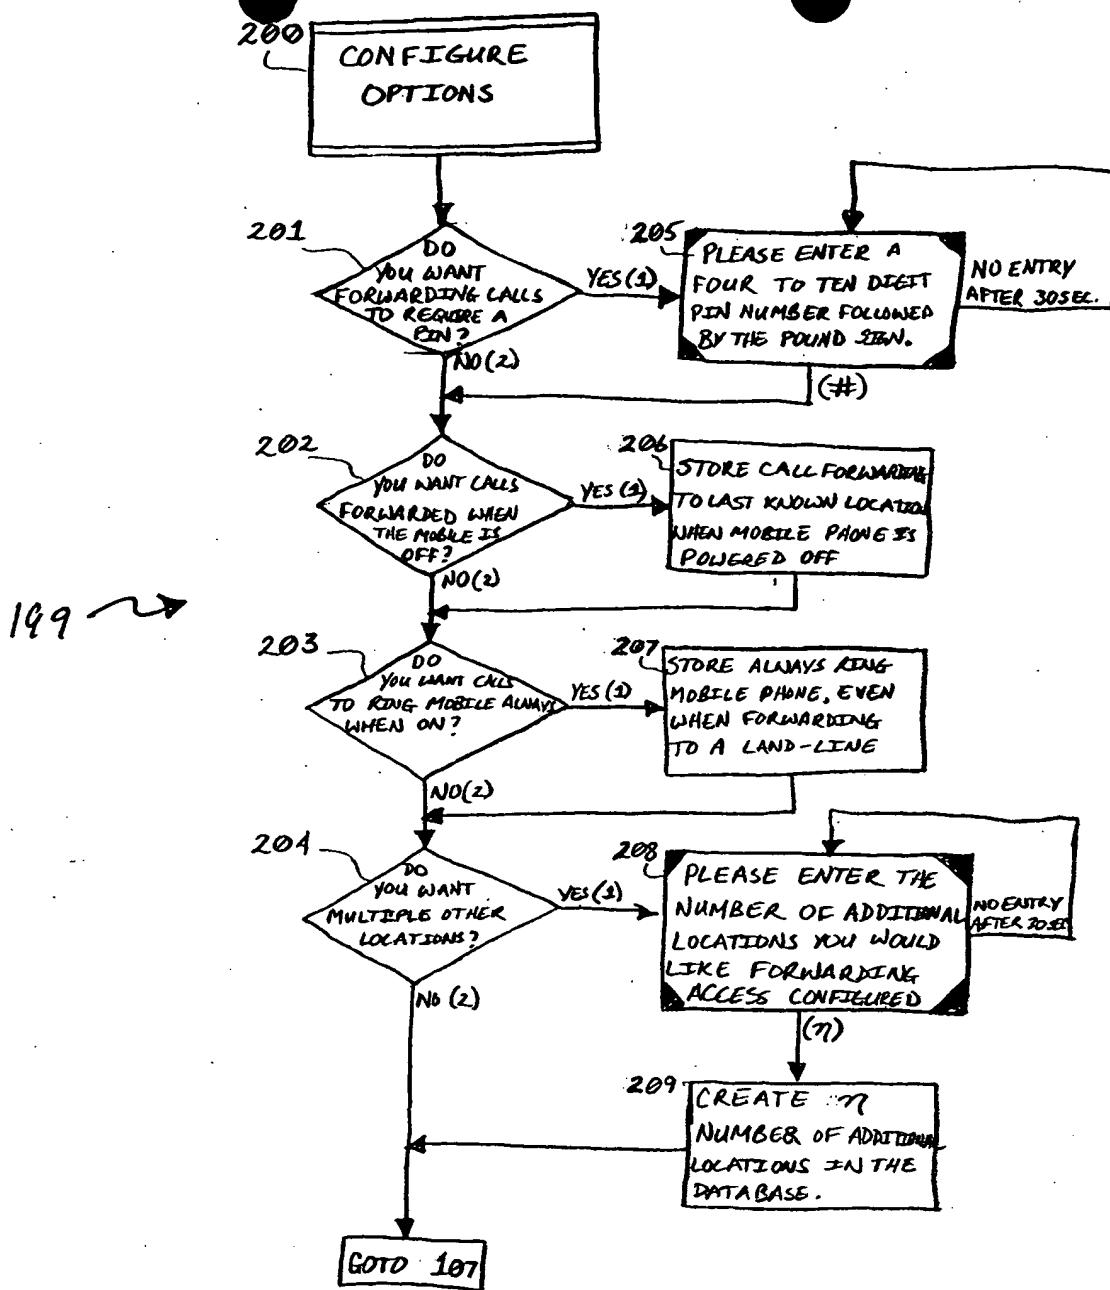


Fig. 13

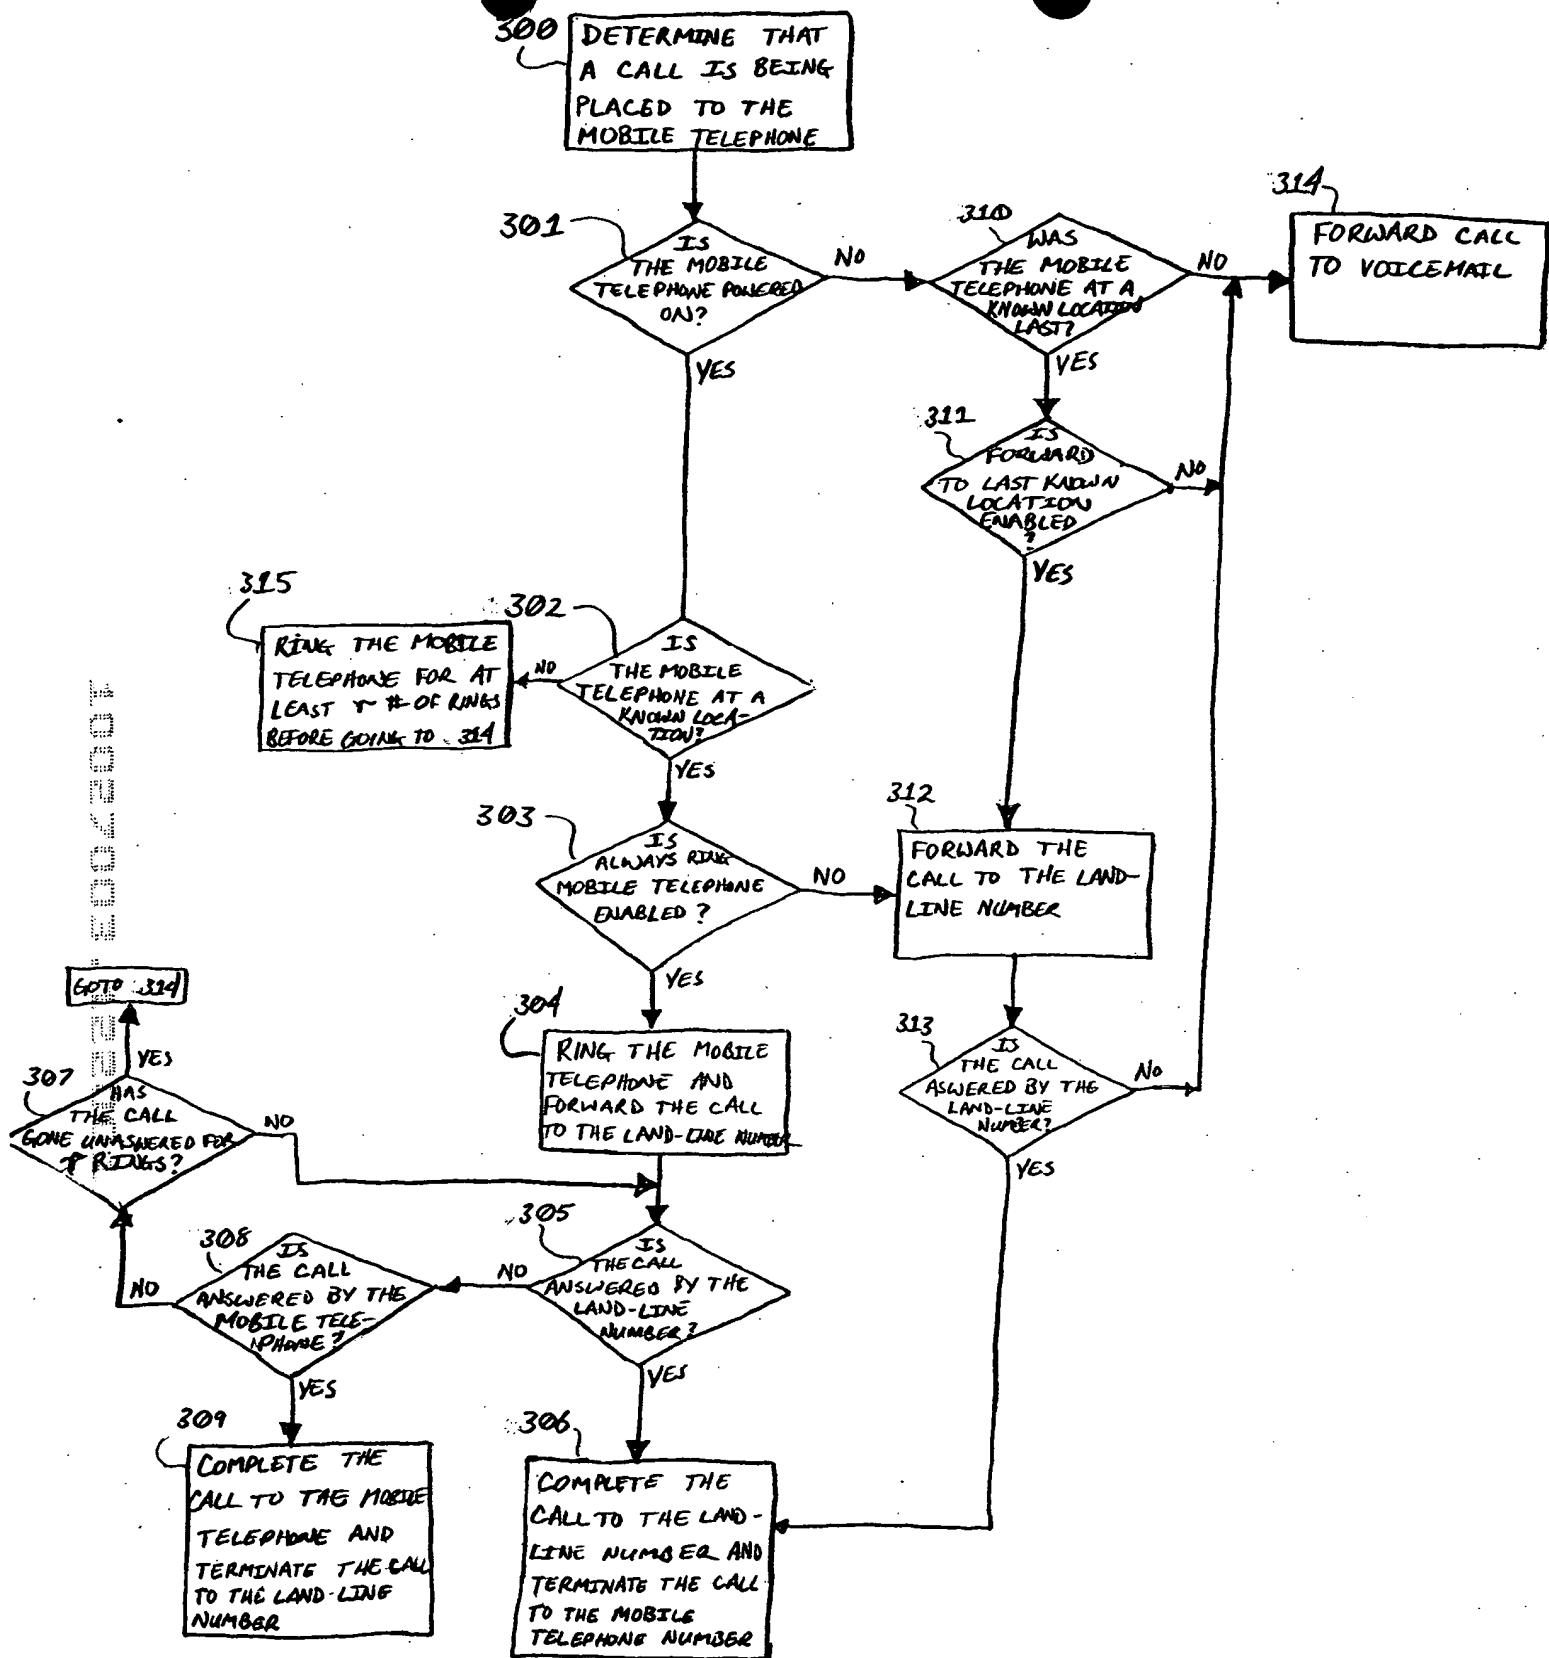


Fig. 14

The diagram shows five locations connected to a central point labeled '601'. Arrows point from each location to its corresponding landline number. The locations and their numbers are:

- 124 → PRIMARY RESIDENCE: 01529085551234
- 224 → SECONDARY RESIDENCE: 01529085556789
- 324 → PRIMARY OFFICE: 01529085553412
- 424 → REMOTE OFFICE #1: 011490695555123
- 524 → REMOTE OFFICE #2: 095555123

LOCATION

LOCATION	COORDINATES		LAND-LINE NO.
	LAT.	LONG.	
124 → PRIMARY RESIDENCE	N40.5139	W74.479	01529085551234
224 → SECONDARY RESIDENCE	N40.5631	W74.472	01529085556789
324 → PRIMARY OFFICE	N40.5826	W74.544	01529085553412
424 → REMOTE OFFICE #1	N50.27011	E11.15121	011490695555123
524 → REMOTE OFFICE #2			095555123

Fig. 15

The diagram shows five locations connected to a central point labeled '601'. Arrows point from each location to its corresponding setting for PIN Enabled, Forward When Off, and Always Ring. The settings are:

- 124 → PRIMARY RESIDENCE: PIN Enabled: 0, Forward When Off: 1, Always Ring: 1
- 224 → SECONDARY RESIDENCE: PIN Enabled: 0, Forward When Off: 0, Always Ring: 0
- 324 → PRIMARY OFFICE: PIN Enabled: 1, Forward When Off: 1, Always Ring: 1
- 424 → REMOTE OFFICE #1: PIN Enabled: 1, Forward When Off: 1, Always Ring: 1
- 524 → REMOTE OFFICE #2: PIN Enabled: 1, Forward When Off: 1, Always Ring: 1

LOCATION

LOCATION	PIN ENABLED	FORWARD WHEN OFF	ALWAYS RING
	0	1	1
124 → PRIMARY RESIDENCE	0	1	1
224 → SECONDARY RESIDENCE	0	0	0
324 → PRIMARY OFFICE	1	1	1
424 → REMOTE OFFICE #1	1	1	1
524 → REMOTE OFFICE #2	1	1	1

Fig. 16